


# ROV Gasket Removal Tool

## - ROV operated

The ROV Gasket Removal Tool is designed to remove and replace the AX and VX type gaskets inside the wellhead.

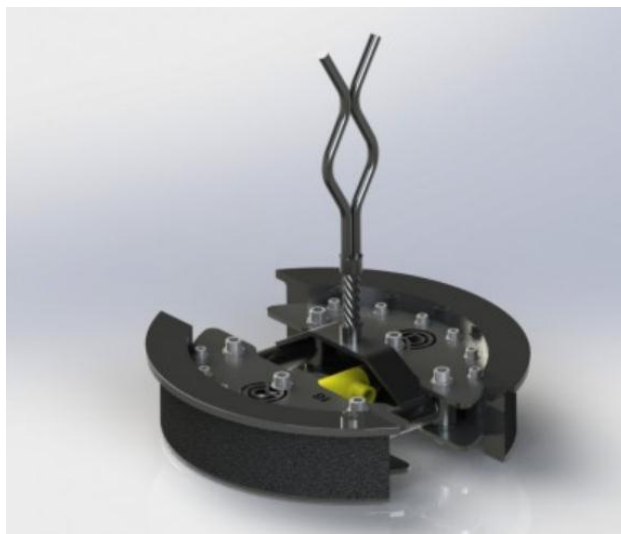

### What's included

- Shoes for 16 ¾ " and 18 ¾ " Gaskets
- All Required Hoses
- Manual, Test Certificate and transport boxes

ROV Gasket Removal Tool	
ROV Handle	Fishtail/D-Handle
Weight in air	15,3Kg
Weight in water	10,4 Kg
Circumference:	477mm
Height	432mm
Maximum Depth	3000 MSW
Maximum Piston Pressure	200Bar
Hydraulic connections	4 JIC